



Shower Drain Base Waterproof Membrane Coupling

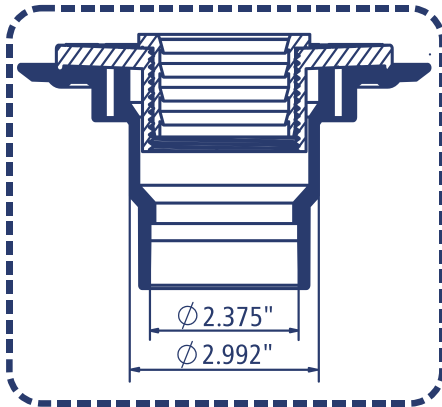

- ✓ Work with any 2 inch (OD) no-hub outlet shower drain.
- ✓ Two mounting options of shower drain-standard or adjustable height.
- ✓ Connect to 2 inch or 3 inch NPS Schedule 40 DWV Pipe.
- ✓ Upgraded weep holes easily move penetrated water back to the drain.
- ✓ Two optional materials ABS or PVC to connect with different plumbing pipe

Quantity: 1

Designed in accordance with
ASME A112.18.2/CSA B125.2

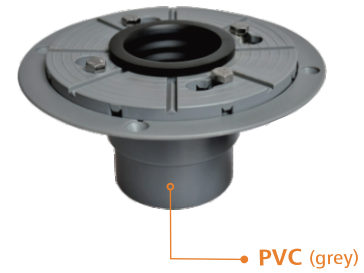

• PVC (grey)




• ABS (black)

Note: This packing box are common to ABS and PVC.
Only contain **ONE** piece of drain base in each box.

Assembly Diagram

Thoroughly inspect the product and components before installation. Please report any damaged or missing components to the retailer or us for a replacement, return or repair.

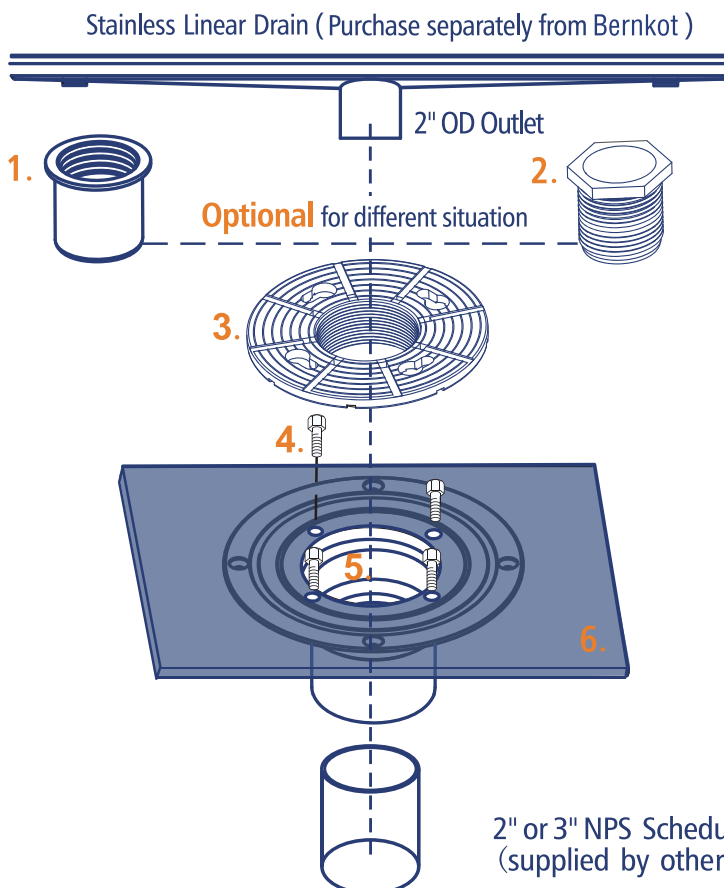

1. Rubber Coupling /Gasket
2. Threaded Coupling
3. Membrane Clamp
4. Stainless steel bolts
5. Drain Flange/Drain Base
6. * Waterproof Membrane (supplied by others)

- Cut four slits on the membrane for the bolts to poke through.
- Not suitable for "hot-mop" painted membrane considering fire hazard.
- Only allow to solvent-weld (glue) to **same material** plumbing pipe.
- Use **correct cement** compound to solvent weld with plumbing pipes.

2" or 3" NPS Schedule 40 DWV Pipe.
(supplied by others)